MET001 - BRD Instructions DTCM01 E (20180902) NO LOGO.pdf 1 2018-09-02 11:47:35 AM

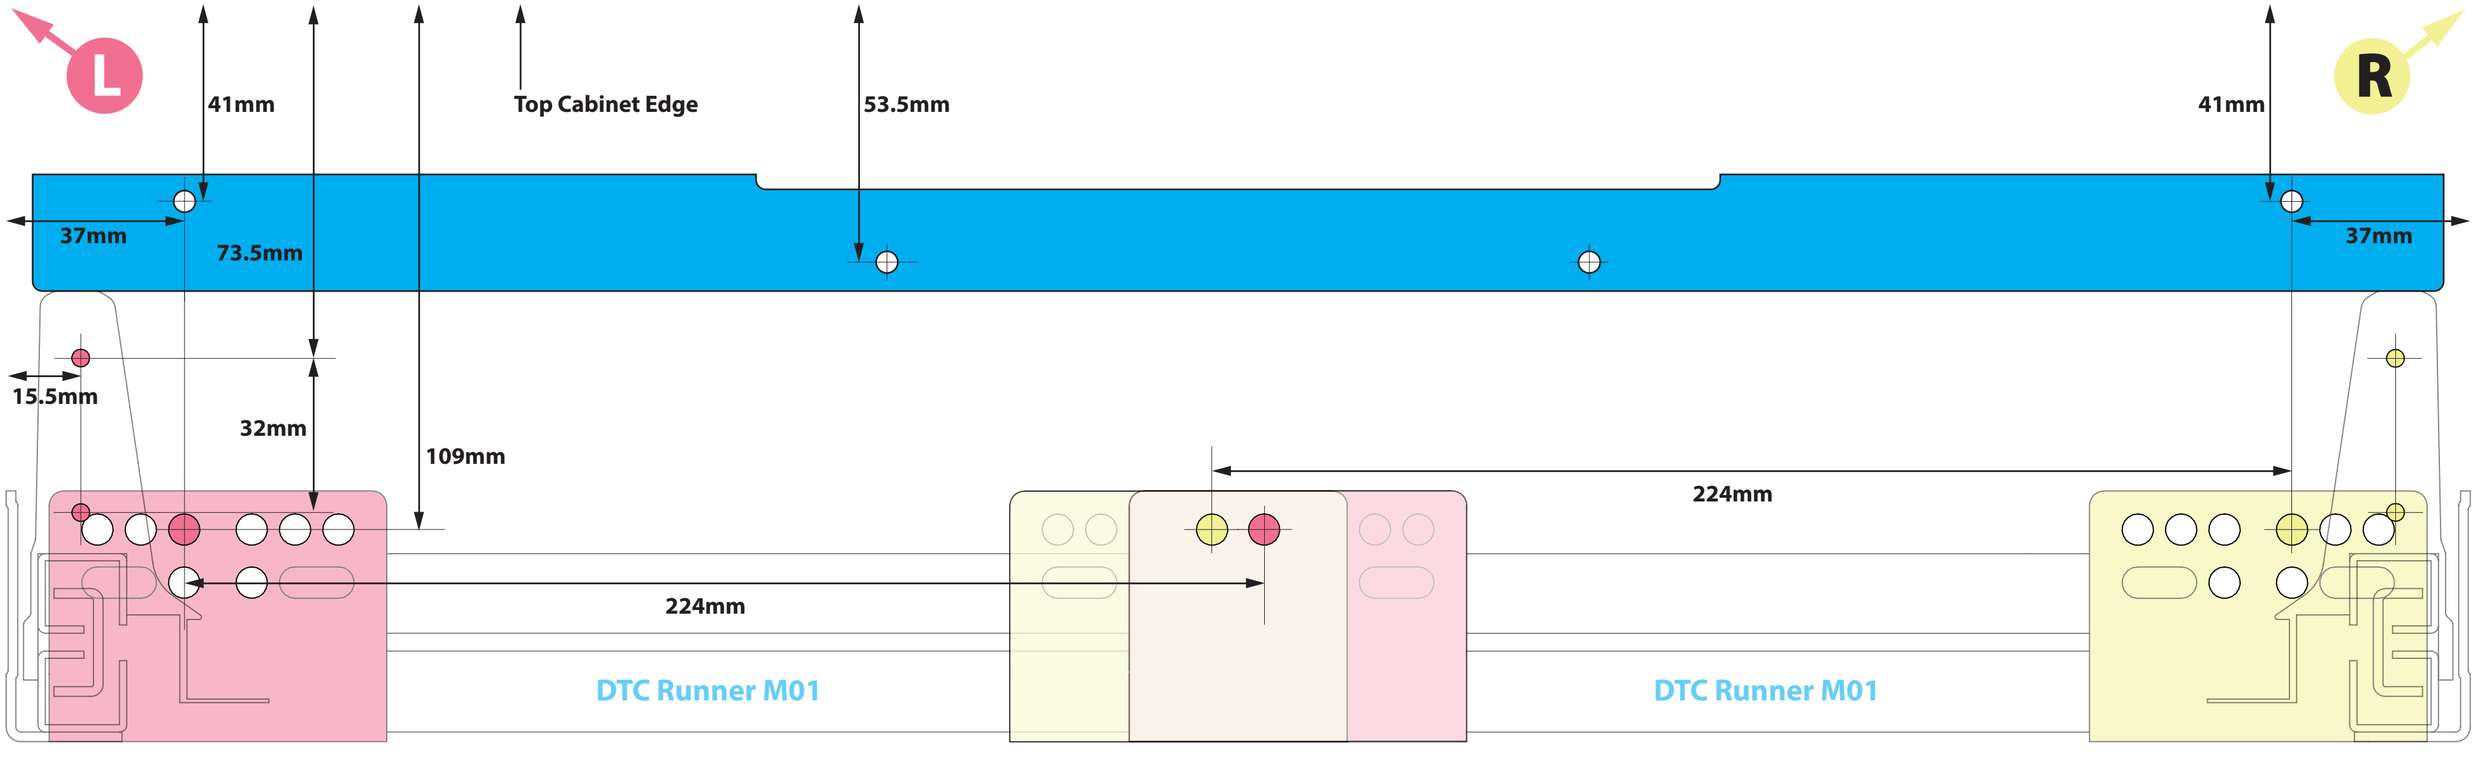

1

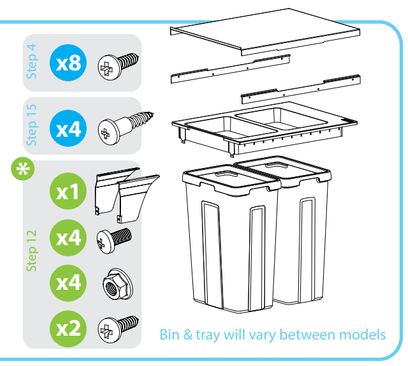

Supplied components + DTC Runner Set

Door Support Brackets

2

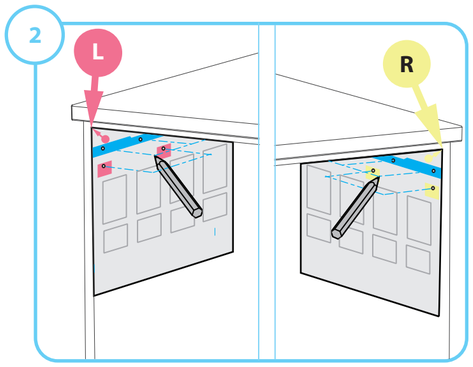

Use above template to mark holes

3

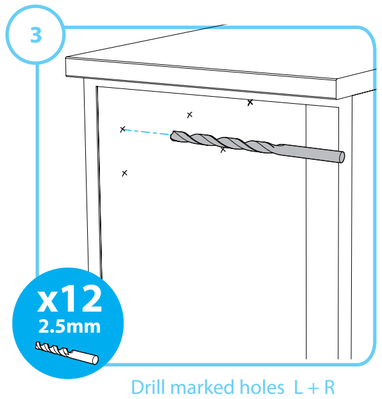

Drill marked holes L + R

4

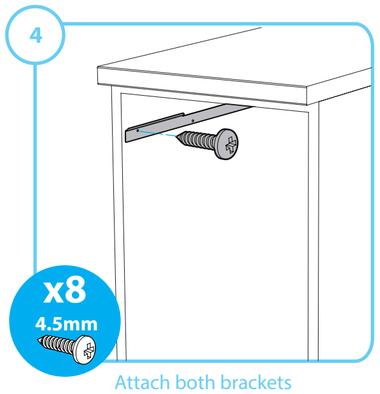

Attach both brackets

5

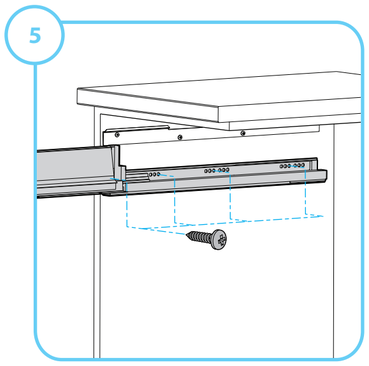

Mount DTC runners

6

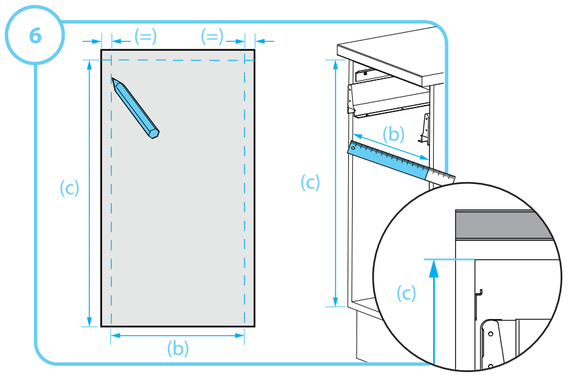

Measure the cabinet width (b), and the top inside cabinet height (c), mark on the door

7

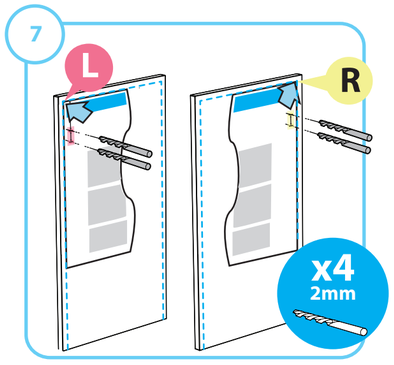

Align instructions and use side templates to mark and drill holes

8

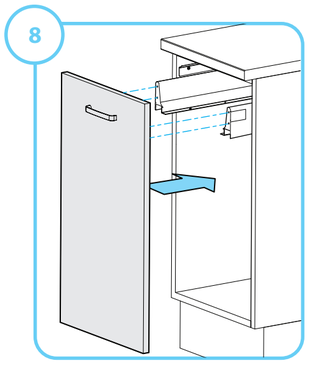

Mount door runner brackets to door and clip into the runners

9

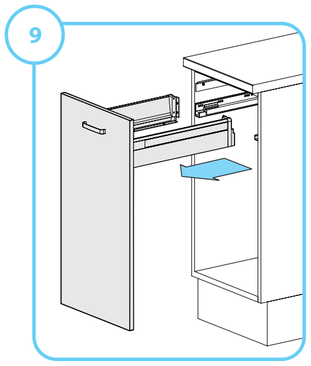

Remove drawer assembly

10

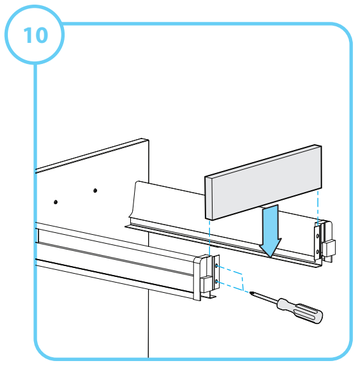

Install drawer back

11

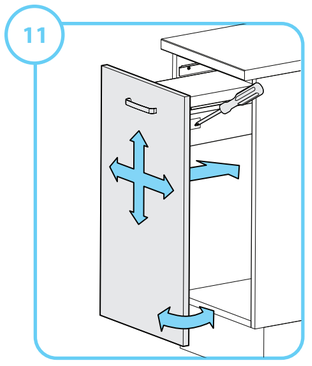

Re-install drawer assembly and adjust door

12

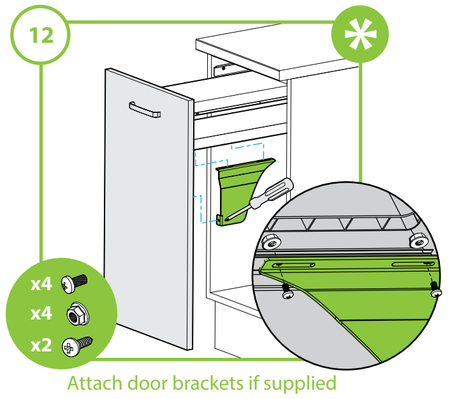

Attach door brackets if supplied

13

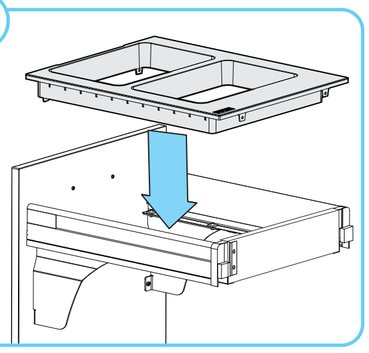

Install tray

14

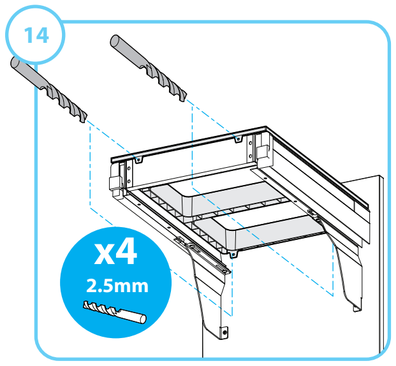

Center tray, mark and drill holes

15

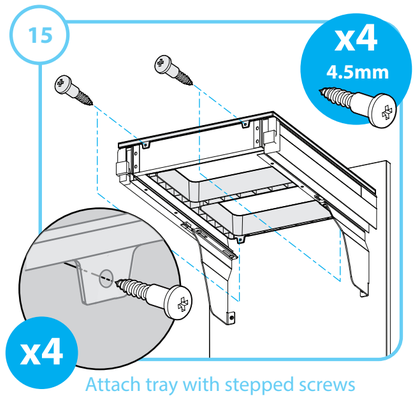

Attach tray with stepped screws

16

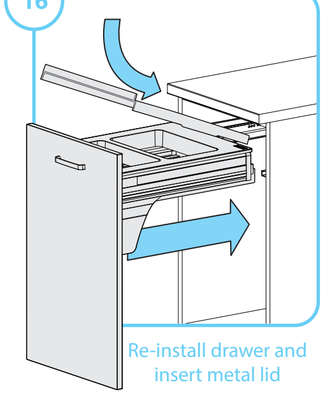

Re-install drawer and insert metal lid

17

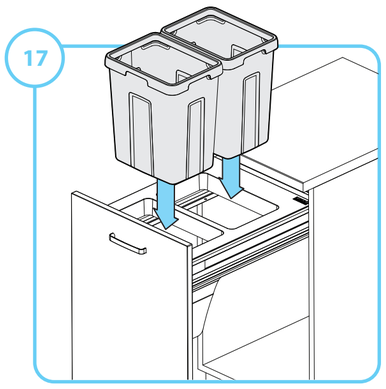

Insert bins in tray