




Supplied components

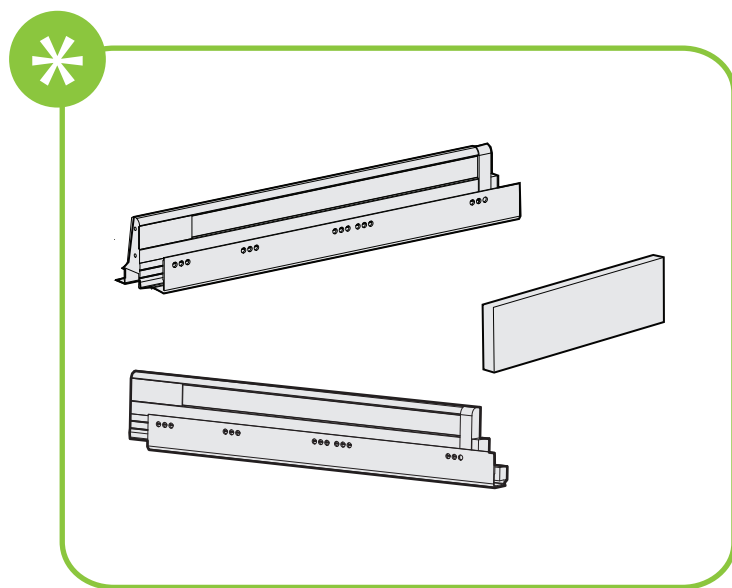


Supplied components if runners are purchased with the bin (screws supplied)

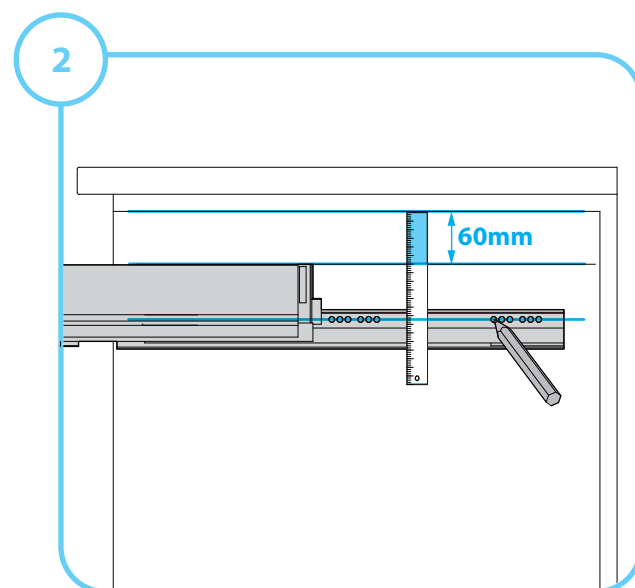


Measure 60mm (minimum) to top of runner and mark location of mounting holes

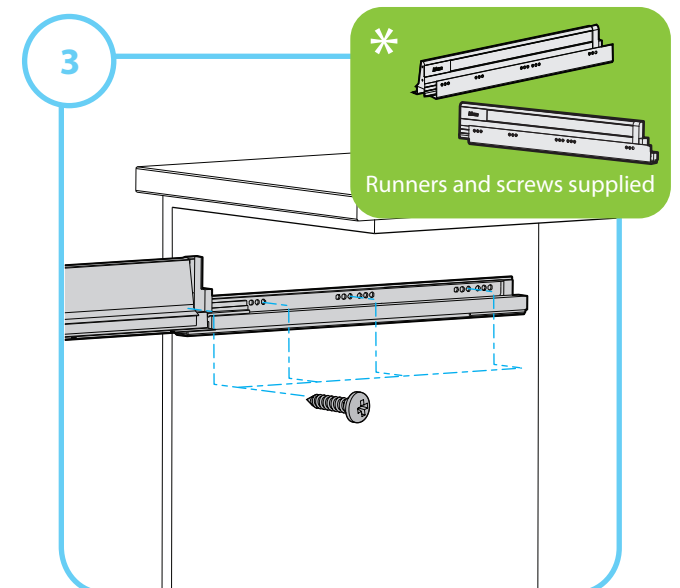


Mount runners as per manufacturers instructions (runners and screws not supplied)

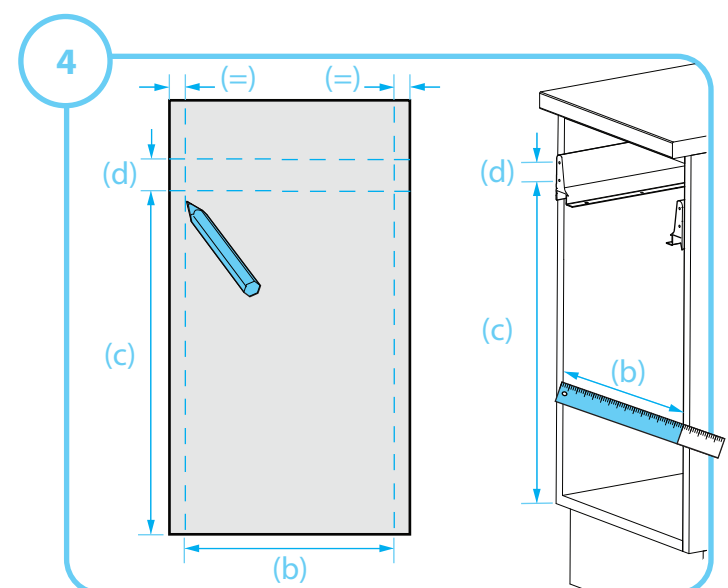



Measure the cabinet width (b), and the runner hole height (c), and spacing (d), mark on the door

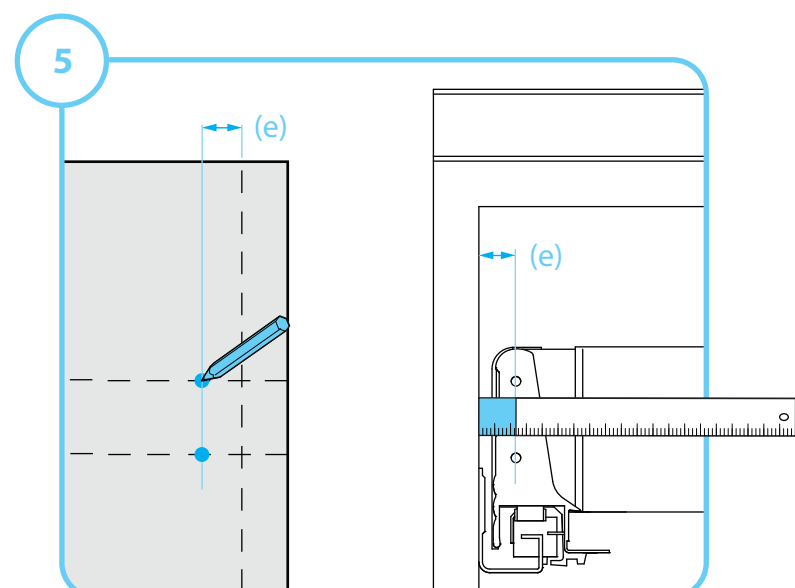



Measure the hole inset distance (e) and mark on the door

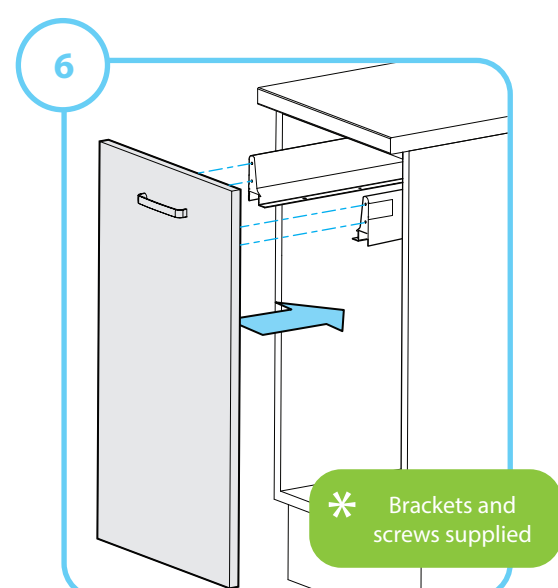



Mount door runner brackets to door and clip into the runners (screws not supplied)

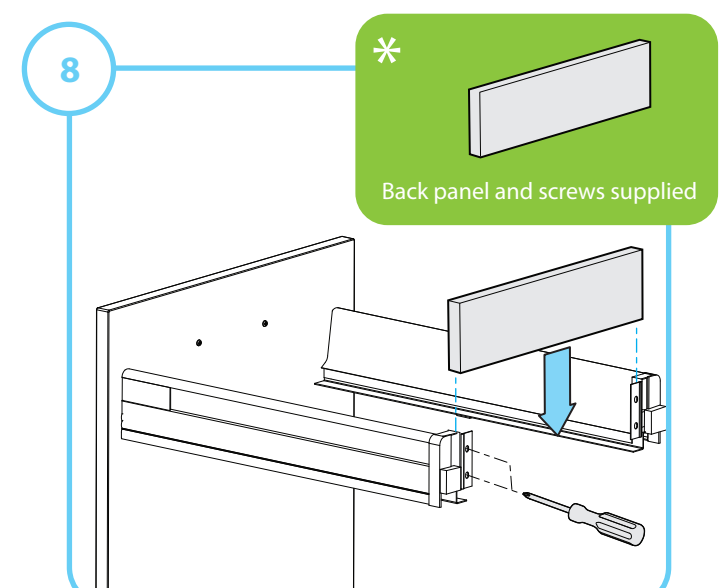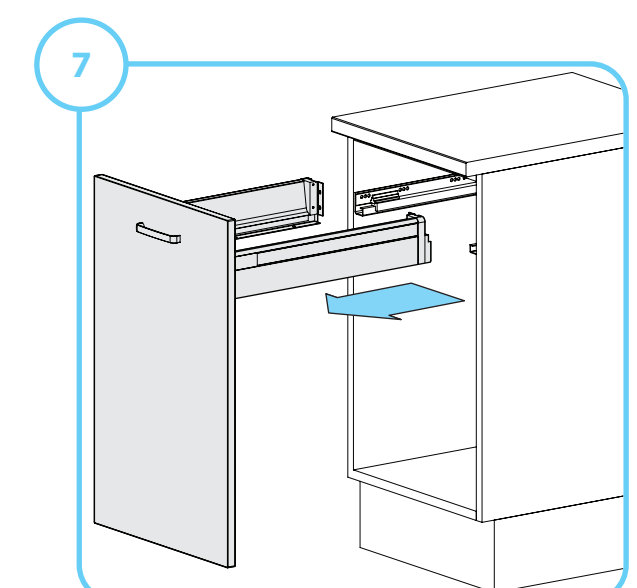


Install drawer back panel (refer to runner instructions for panel size, screws not supplied)

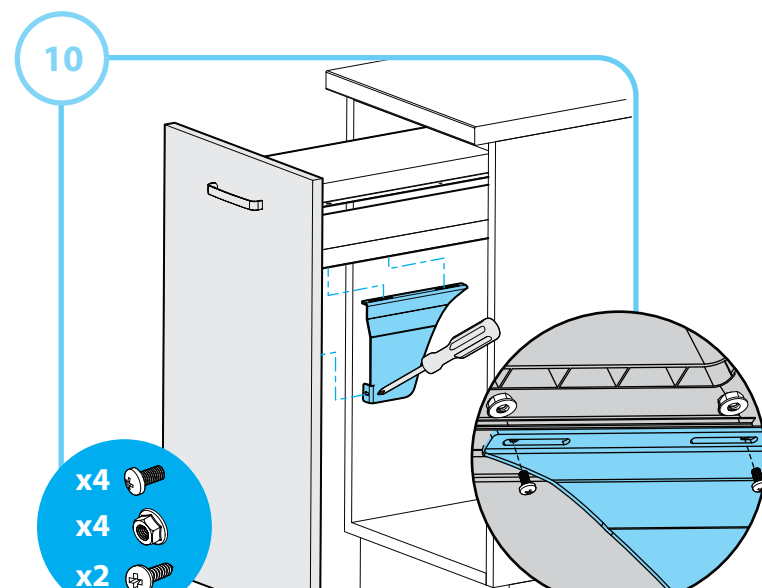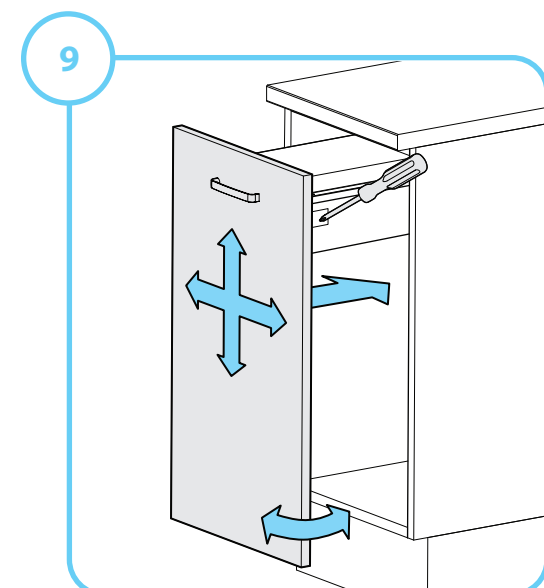

Attach door brackets

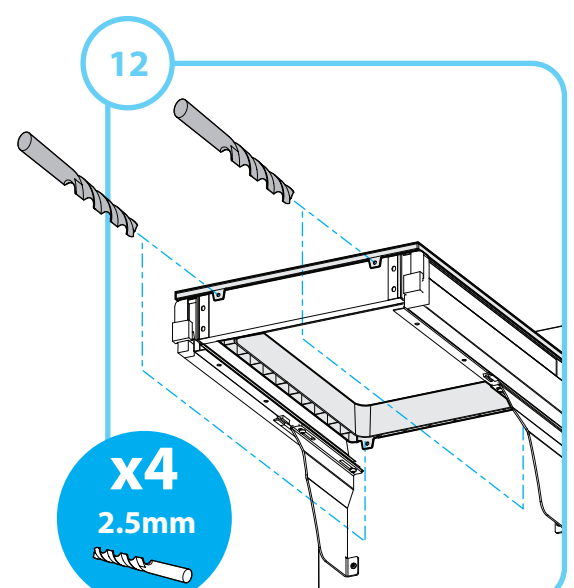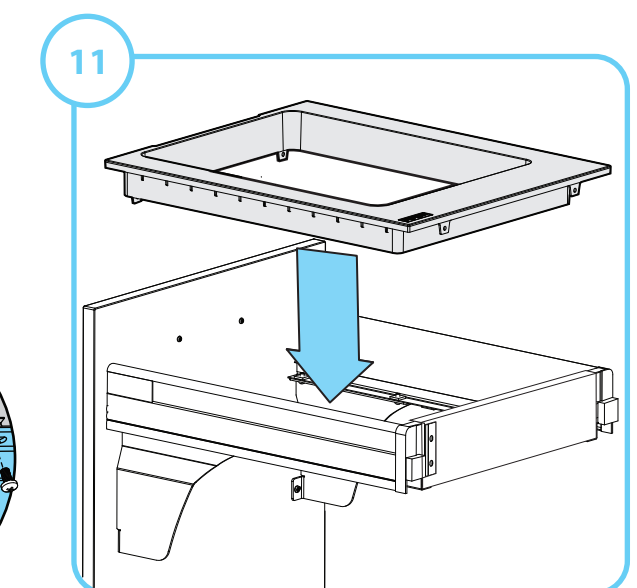

Center tray, mark and drill holes

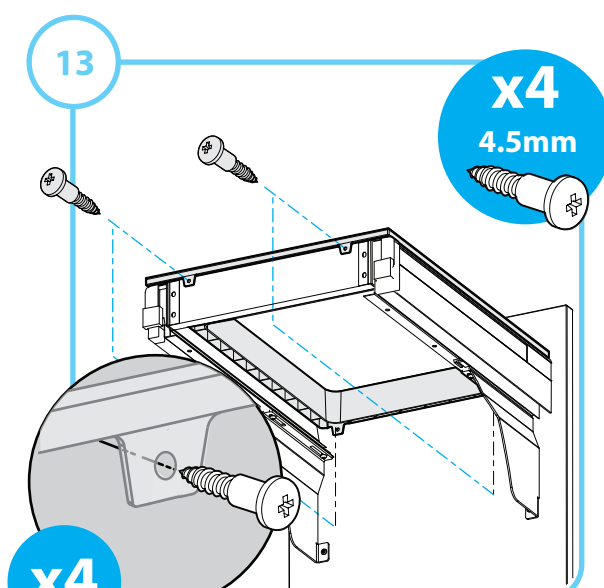

Attach tray with stepped screws

